

POSSIBLE PROBLEMS**POSSIBLE CAUSES AND SOLUTIONS**

(Refer to Operation and Maintenance procedures for detail information)

Jack will not lift load

Jack will lift load, but will not hold

Jack will not lower completely

Poor jack lifting. Pump feels spongy

Jack will not lift to full height

Handle raises by itself when jack is under load

X

Release valve not tightly closed. To close or tighten, turn release valve clockwise.

X

X

X

X

Air is in hydraulic system. Release air from system.

X

X

X

X

Oil level is low in jack. Add oil as required.

X

1. Oil reservoir is over filled. Drain out some oil.
2. Lubrication of moving parts is necessary.

X

X

X

Power unit is malfunctioning. Replace the power unit.